

BaByliss®



BIG HAIR

Model 2775U



BIG HAIR

The BaByliss Big Hair air styler is perfect for adding gorgeous volume and shine to styles. The large ceramic barrel gives fullness and body as you style whilst the soft bristles create ultimate shine and smoothness.

FEATURES

- 700W
- 50mm ceramic barrel with soft brush bristles
- High shine ionic conditioning
- 2 heats plus a cool setting
- 2 rotation speeds for total control
- Multi-directional brush
- Hinged rear filter
- Protective cover
- 2.5m longer length cord
- 3 year guarantee

SAFETY CAUTIONS

- This appliance should only be used as described within this instruction booklet. Please retain for reference.

WARNING! Polythene bags over product or packaging may be dangerous. To avoid danger of suffocation, keep wrapper away from babies and children. These bags are not toys.

- **UK Only:** This appliance must not be used in the bathroom. If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous

even if the appliance is switched off. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

WARNING! Do not use this appliance near water contained in basins, bathtubs or other vessels.



- Do not use this appliance in the bathroom.
- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or if the appliance has been dropped. In the event of damage contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not leave the appliance unattended when switched on or plugged in.
- This appliance is equipped with a safety thermostat. In the event of overheating the appliance will stop automatically. Should this happen, push the speed switch on the handle to the "0" position to switch off, unplug and allow to cool for 10 minutes. Before use, ensure the rear filter is clear of hair and other debris. Plug in and switch on. If the appliance continues to overheat discontinue use immediately, switch off and unplug. Contact the Conair Customer Care Line (refer to the 'UK After Sales Service' section for further information).

- Do not place the appliance on any heat sensitive surface whilst in operation.
- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the ears, eyes, face and neck.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Careful adult supervision is required when this appliance is used on or near children. Do not use on very young children.
- This appliance should not be used, cleaned or maintained by children. Keep out of reach of children.
- Always ensure that this appliance is kept out of the reach of children at all times, particularly during use and whilst cooling.
- After use, do not coil the lead around the appliance as this may cause damage to the lead. Instead, coil the lead loosely by the side of the appliance.
- This appliance complies with the requirements of Directives 2004/108/EC (Electromagnetic Compatibility) and 2006/95/EC (Electrical Safety of Domestic Appliances).

Ionic Technology

Many aspects of modern living, including air conditioning, contact with man-made fibres and air pollution contribute to a build-up of static electricity in the hair. Even brushing and towel drying the hair can increase these levels, causing the surface of the cuticle to become rough. Consequently, hair may have a dull appearance. Also high levels of static charge cause hair to become “fly-away” and difficult to style. The ion generator produces a stream of negative ions which act to neutralise the static charge, smoothing the scales on the cuticle for shiny, smooth and manageable hair so you can achieve your desired style easily.

Heat Settings

There are 2 heats plus a cool setting. Use the high heat setting for initial drying, and the low heat setting as hair begins to dry and for styling. Use the cool setting to set the style for long lasting results. Slide the ‘on/off’ switch to the first position to select the cool setting ‘*’, the second position for the low heat ‘I’, and the third position for the high heat ‘II’.

Rotation Settings

There are two rotation speed settings. To make the brush head rotate, press the buttons marked << and >>, these will make the brush head rotate clockwise and anticlockwise. When the appliance is set on the high heat setting the brush head rotation will be faster. When the appliance is set on the low heat setting the brush head rotation will be slower. For best results, use the rotating brush feature to create styles with gorgeous volume and shine.

NOTE: When the appliance is used on the cool setting, the brush head will not rotate.

Protective Cover

After every use, always ensure the protective cover is placed over the brush head. This protects the bristles from damage. When placing the protective cover over the brush head, ensure to line it up with the

grooves around the top of the airstyler so it slides easily into place.

NOTE: The diagram on the protective cover demonstrates the direction it should be placed on to the brush head. If placed on incorrectly it may be difficult to remove.

INSTRUCTIONS FOR USE

- If you have long or thick hair, you may find it quicker and easier to use a hairdryer first, to rough dry your hair and remove the excess moisture. For added volume, turn your head upside down as you dry.
- Once the hair is 80% dry, you should start to create your style using the styler.

Maximum Volume and Body

- 1) Start by sectioning the hair.
- 2) To turn the appliance on, slide the 'on/off' switch to the correct heat setting for your hair.
- 3) Place the appliance into the hair, close to the roots and brush through the section to remove any tangles.
- 4) For added root lift, hold the brush in place at the root for a few seconds.
- 5) Move the brush through the hair, towards the ends and as you reach the end of the section, start to rotate the brush away from your head by pressing and holding the appropriate rotation button.
- 6) As you do this, resist the rotation of the brush by pulling the brush downwards. This will create tension through the section of hair.

IMPORTANT! It may take several attempts to perfect this technique, if the brush spins too quickly, simply release the rotation button and remove from the hair.

- 7) For even more volume, place the brush at the end of the hair section and allow the brush to rotate along the hair section by pressing and holding the appropriate rotate button. Wind the entire section of hair around the barrel until you reach the root. Release the rotate button and then leave the brush in the hair for a few seconds.
- 8) Slide the switch to the cool setting '**' for a further few seconds, this

creates long, lasting volume.

- 9) To release the section, move the switch back to setting 'I' or 'II' then press and hold the opposite rotation button to unwind the hair section.
- 10) Repeat as necessary.
- 11) After use, switch off and unplug the appliance.
- 12) Allow to cool before storing away.
- 13) Place protective shield over brush head to protect the bristles.
Please see the 'Protective Cover' section for direction.

Helpful Hints and Tips

- To define layers and add shape to the ends of the hair, follow steps 5 - 6 and repeat through the sections.
- To get root volume and body through the top section of hair, follow steps 7 - 9 using an upward motion.

CLEANING & MAINTENANCE

To help keep your appliance in the best possible condition follow the steps below:

General

- Do not wrap the lead around the styler, instead coil the lead loosely by the side of the dryer.
- Do not use the styler at a stretch from the power point.
- Always unplug after use.

Cleaning & Maintenance

- Unplug the appliance and let cool completely before cleaning it.
- Holding the handle of the appliance firmly pull the top of the rear filter towards you, this will enable the rear filter to open.
- Using a soft brush, clean any hair and other debris from the filter.
- Replace the rear filter by pushing back into position.
- To clean the outside of the styler, wipe with a damp cloth. Make sure no water enters the styler and it is completely dry before use.

UK GUARANTEE

This BaByliss appliance is guaranteed for consumer use for 3 years. This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repairs by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

UK AFTER SALES SERVICE

For further advice on using the appliance, contact the Conair Customer Care Line on 0870 5 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com

If you should need to return your appliance to us please send it to the following address:

Customer Care Centre,
Conair Logistics
Unit 4
Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW


Please enclose your name and address, together with a copy of proof of purchase and details of the fault.

UK WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL

BROWN = LIVE

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L.
- Neither core should be connected to the earth terminal of a three pin plug marked with the letter E or .

This appliance comes fitted with a British Standard 13 amp type plug and a 13 amp fuse. It is important to always use a 13 amp fuse, should its replacement be required. If any other type of plug is used, a 5 amp fuse must be fitted at the distribution board.

